



## MRG NAVIGATOR INSTRUCTIONS FOR COMPANY MANAGERS: ACCOUNT SET UP AND SAMPLE LOG IN

- Collect sample(s) using supplies from your Grease Thief or Oil sampling kit.
- Affix the barcode equipment label to the sample container. This label uniquely identifies your sample.
- Using a PC or mobile device, navigate to [mrgnavigator.com](http://mrgnavigator.com).
- Sign in with your username and password.
  - Contact MRG Labs at 717-843-8884 if you do not have an MRG Navigator Account.
- On the left side of the screen select COMPANIES, circled below in red.

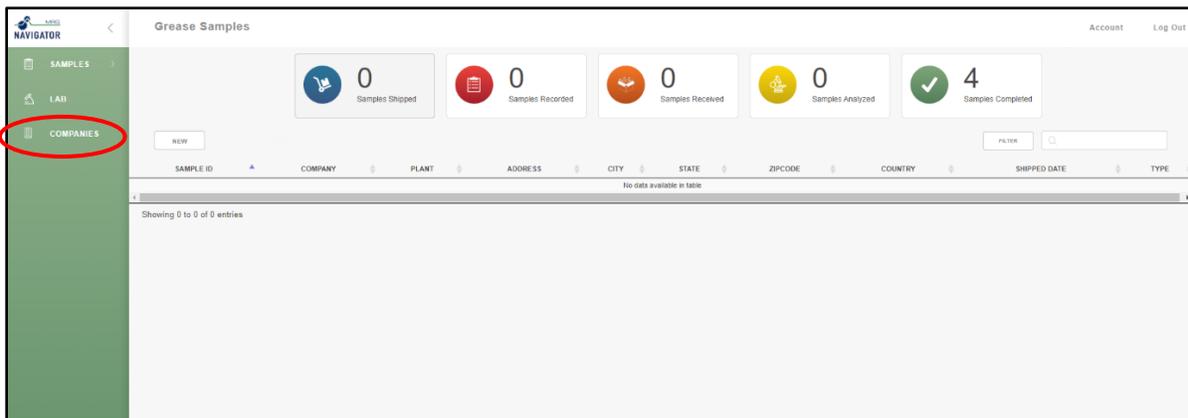


- From this tab select the company you're entering samples for.
- Hover over SAMPLES, circled below in red, and select GREASE or OIL.

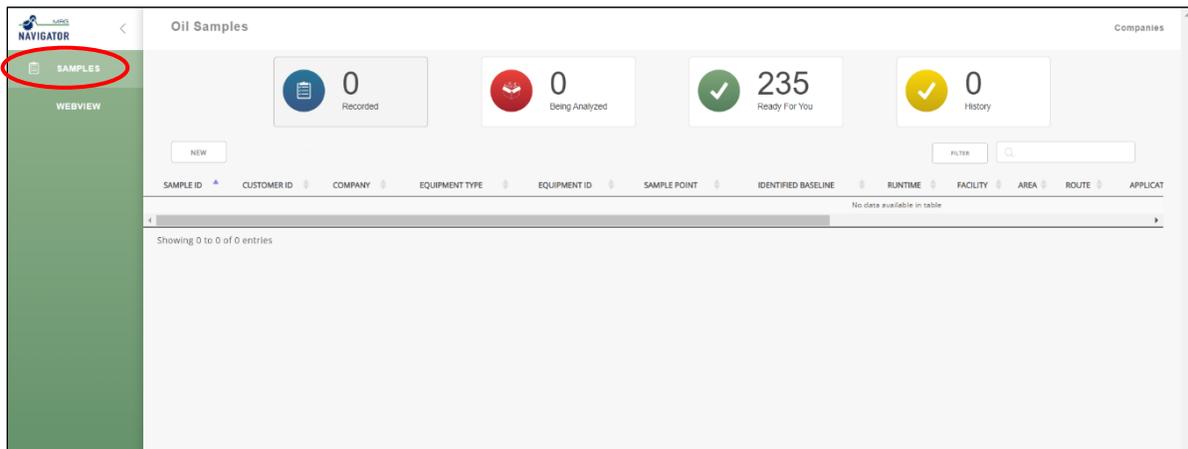


## MRG NAVIGATOR INSTRUCTIONS FOR COMPANY MANAGERS: ACCOUNT SET UP AND SAMPLE LOG IN

- To record samples in MRG Navigator **PRIOR** to shipment:
  - Click NEW, circled below in red, and enter all known sample information, including the oil used in the equipment (aka. Identified baseline).

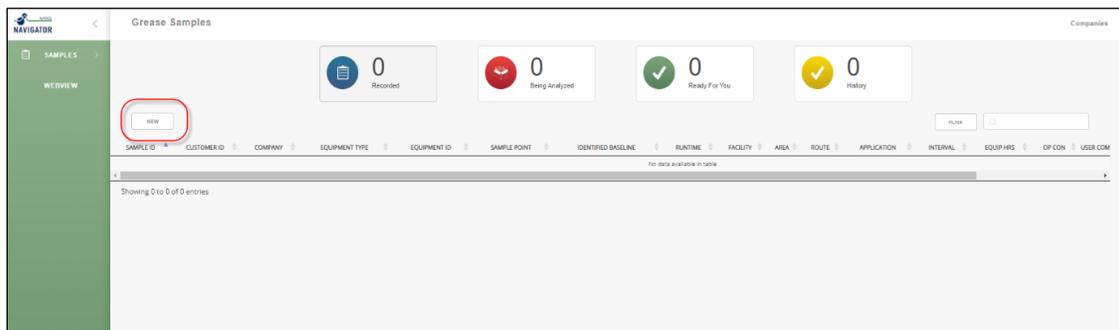

- If there are **multiple samples** to enter download the excel template, enter all sample information, and upload the completed file.

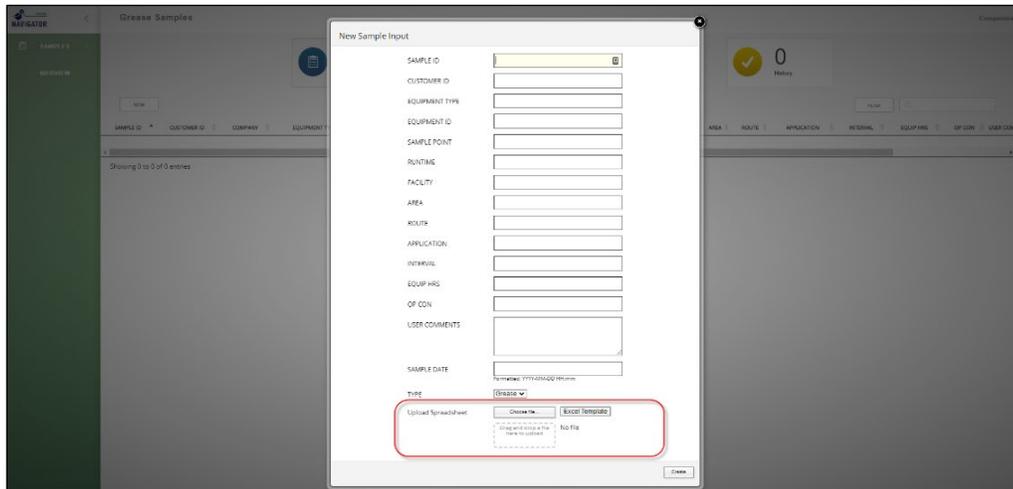

- Follow the progress of samples and see completed results by logging back in at any time. From the original dashboard you can view the sample status and results for all customers. If you'd like to view results for a specific customer, simply go into the COMPANIES tab and select that company, or filter using the search box in the upper right corner of the results tab. Results may be viewed online, as an excel file or in individual PDF reports.
- If you have any questions, please contact the lab.