



MRG NAVIGATOR INSTRUCTIONS: ACCOUNT SET UP AND SAMPLE LOG IN

- Collect sample(s) using supplies from your Grease Thief or Oil sampling kit.
- Affix the barcode equipment label to the sample container. This label uniquely identifies your sample.
- Using a PC or mobile device, navigate to mrgnavigator.com.
- Sign in with your username and password.
 - Contact MRG Labs at 717-843-8884 if you do not have a MRG Navigator Account.
- Hover over SAMPLES, circled below in red, and select GREASE or OIL.

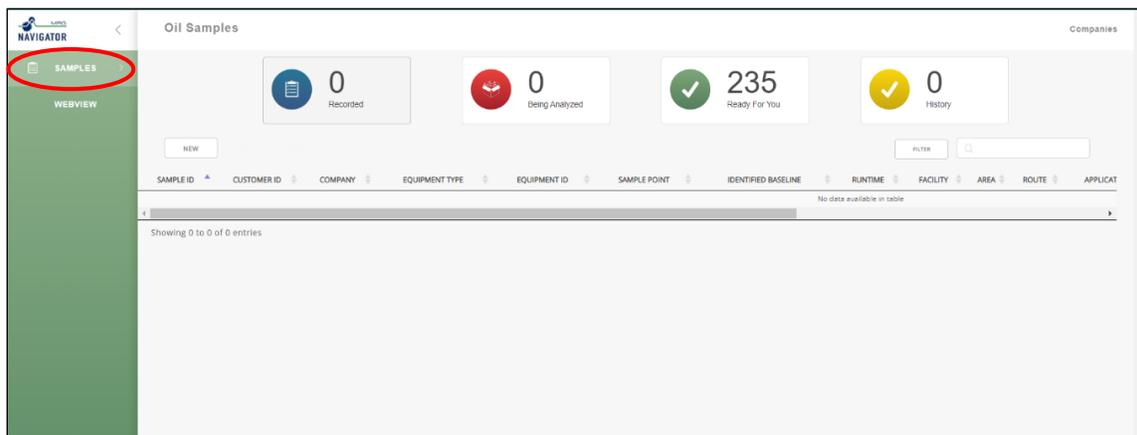


- Record your samples in Navigator **PRIOR** to shipment.
 - Click NEW, circled below in red, and enter all known sample information, including the oil used in the equipment (aka. Identified baseline).

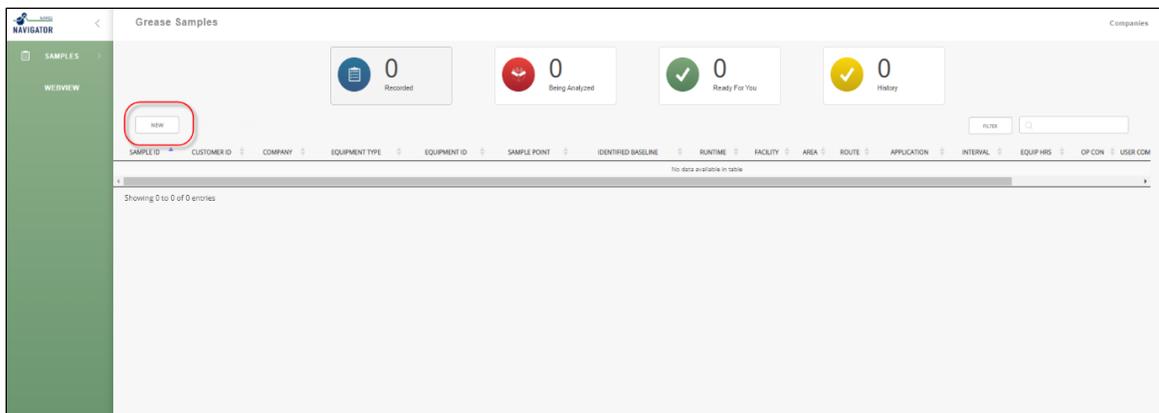

MRG NAVIGATOR INSTRUCTIONS: ACCOUNT SET UP AND SAMPLE LOG IN

- If there are **multiple samples** to enter download the excel template, enter all sample information, and upload the completed file.

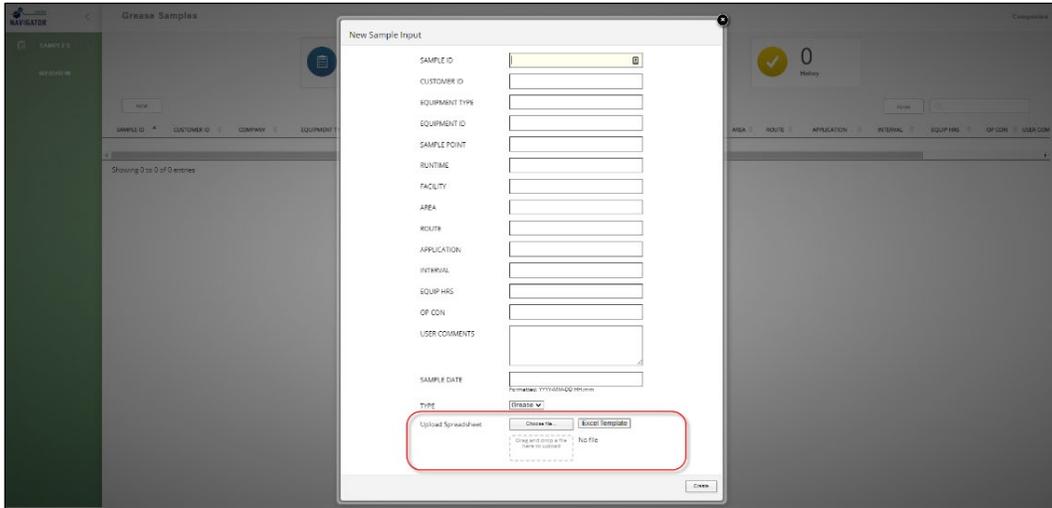

- Follow the progress of your samples and see completed results by logging back in at any time. Results may be viewed online, as an excel file or in individual PDF reports.
- If you have any questions, please contact the lab.